

UPDATES

8

SUMMARY

8.1. FAIRINGS.....3
 8.1.1. LEFT FAIRING REMOVAL3
 8.1.2. RIGHT FAIRING REMOVAL.....4
 8.1.3. PILLAR REMOVAL.....5
 8.1.4. FRONT FAIRING REMOVAL.....6
 8.2. HANDLEBAR.....7
 8.2.1. HANDLEBAR REMOVAL.....7
 8.3. SYSTEM DIAGRAM.....10
 8.3.1. ELECTRICAL SYSTEM DIAGRAM.....10

8.1. FAIRINGS

8.1.1. LEFT FAIRING REMOVAL

- Loosen and remove the screw.
- Remove the LH air duct.
- Loosen and remove the water cooler filler cap support screw.
- Disconnect the pipe from the water cooler filler cap.
- Loosen and remove the three screws.
- Remove the entire left fairing.



8.1.2. RIGHT FAIRING REMOVAL

- Loosen and remove the screw.
- Remove the right air duct.



- Loosen and remove the three screws.
- Remove the entire right fairing.



8.1.3. PILLAR REMOVAL

- Loosen and remove the four screws.
- Remove the pillar.




8.1.4. FRONT FAIRING REMOVAL

- Loosen and remove the four screws.



- Disconnect the connector.
- Remove the front fairing.

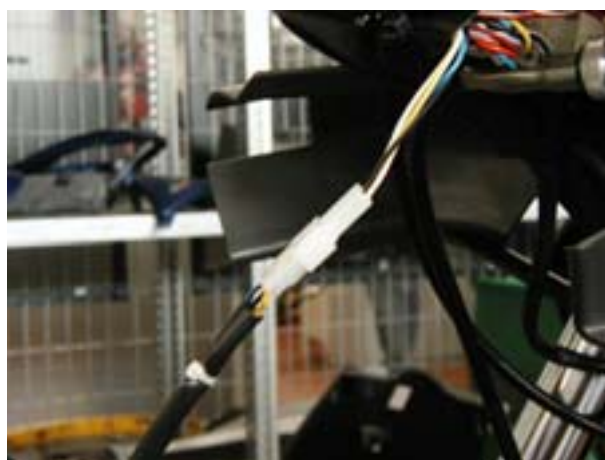

8.2. HANDLEBAR

8.2.1. HANDLEBAR REMOVAL

- Loosen and remove the two screws.
- Remove the U-bolt; move the front brakes lever which will be constrained anyhow, through the brake pipe and wiring.



WARNING

**Do not force tubes and cables.
To avoid dangerous brake liquid leaks, keep the front brake liquid tank in a working position (vertically).**

- Loosen and remove the two screws.
- Remove the U-bolt; move the clutch control which will be constrained anyhow, through the cable.

- Working from both sides, loosen and remove the screw.
- Remove both counterweights.

- Loosen and remove the two lower screws of the right switch.



- Remove the upper part only of the right switch.



- Loosen and remove the two lower screws of the left switch.



- Disconnect the starter's cable.
- Remove the two half shells of the left switch.



- Remove the two covers.



RS 50 TUONO

- Loosen and remove the four screws.
- Remove the two U-bolts.



- Unthread the entire throttle control.
- Remove the handlebar.



- If necessary remove the U-bolts also, loosen and remove the two screws.



Legend:

1. Alternator
2. Ignition coil
3. Regulator
4. Rectifier
5. Battery
6. Starter relay
7. Rear brake light switch
8. Oil level sensor
9. Water thermistor
10. Gear in neutral sensor
11. Low beam light
12. Left rear turn indicator
13. Taillight
14. Right rear turn indicator
15. Key switch
16. Right lights selector
17. Left lights selector
18. Dashboard
19. Thermometer
20. Dashboard lamps
21. Left turn indicator lights
22. High beam indicator
23. Low beam indicator
24. Mixer oil reserve indicator
25. Gear in neutral indicator
26. Right rear turn indicator lights
27. Right front turn indicator
28. High beam
29. Front town light
30. Left front turn indicator
31. Horn
32. Flasher unit
33. Multiple connectors
34. Starter motor
35. Spark plug
36. Front brake light switch
37. Headlight
38. Turn indicators extension

CABLE COLORS

Ar	orange
Az	light blue
B	blue
Bi	white
G	yellow
Gr	gray
M	brown
N	black
R	red
Ro	pink
V	green
Vi	violet